



## GET TO KNOW YOUR SCREEN HOUSE

We recommend you set up your Screen House at home before your first trip with it. That way, you'll be familiar with the process and parts involved, making the set-up at your destination easier.

Your storage bag should include the following:

- Screen House body
- Seven shock-corded poles (in their own sack)
- Stakes

## SET UP

1. (NOT PICTURED) Pick a well-drained, level spot. Make sure it's clear of debris that could damage the floor. Ensure that trees and shrubs won't rub against the shelter. Check for standing dead trees or broken tree limbs that might fall on the shelter.
2. Assemble the poles. Make sure each ferrule is fully inserted so the pole won't be too long.
3. (NOT PICTURED) Spread out the shelter with the floor-side down and the roof on top.
4. Stake out the four corners of the shelter. For the best hold, lean the stakes about 45 degrees away from the shelter. Make the sides tight enough to be straight, but not so tight as to stress the fabric.
5. Slide the two longest straight poles through the roof tunnels.
6. Slide the four crooked poles onto the ends of the crossed roof poles.
7. Insert the ends of the crooked poles into the grommets at the tent corners.
8. Attach the pole clips.
9. (NOT PICTURED) Lay the shortest straight pole across the roof from door to door. Insert its ends into the grommets over the doors and attach the roof clips.

For detailed information on tent use, care, and repair, visit [mec.ca/expertise](http://mec.ca/expertise).