


Plans furnished by Bob Myers:  
 rmyers@one.net

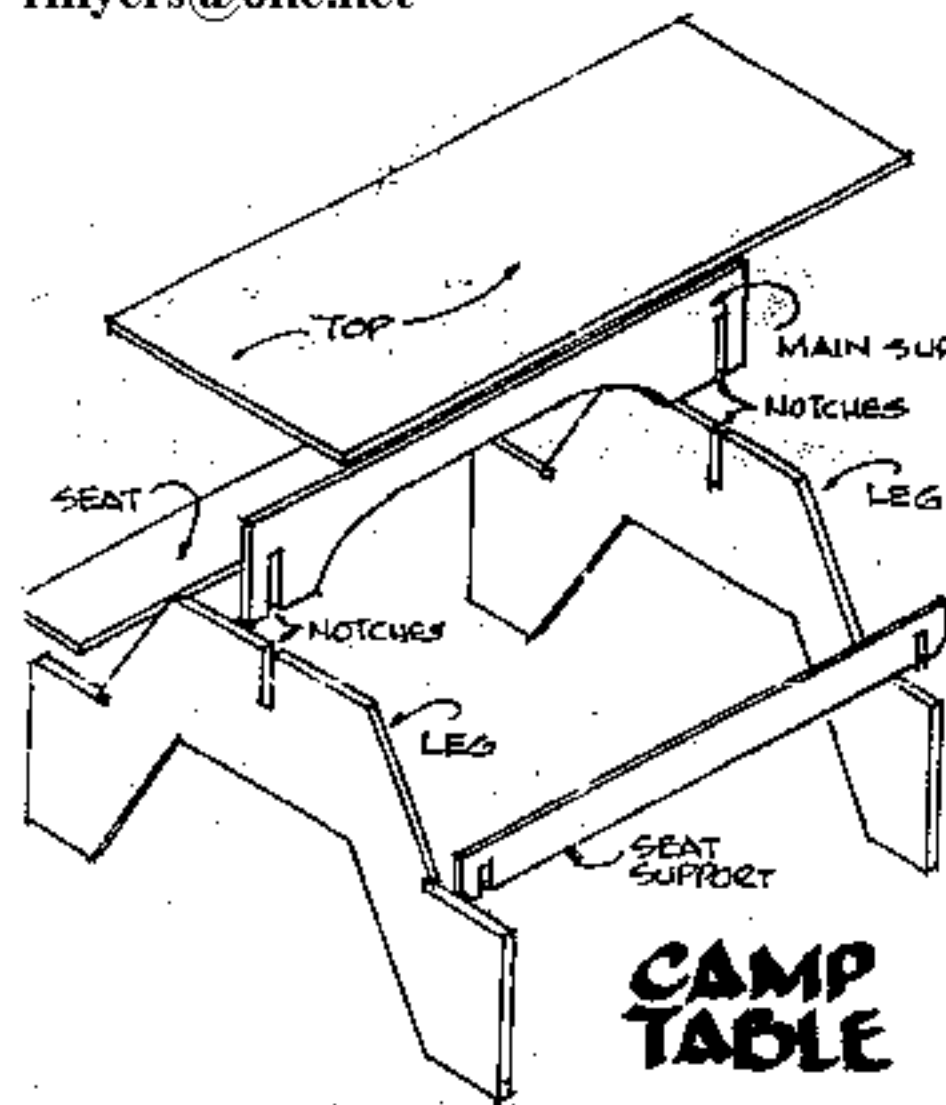

- 1) MATERIAL TO BE  $\frac{3}{8}$ " EXT. PLYWOOD IN A 4'-0" X 8'-0" SD. SHEET.
- 2) SAND ALL EDGES TO PREVENT SPLINTERS.
- 3) ATTACH ALL CLEATS W/ BRASS FLAT HD. SCREWS.
- 4) APPLY TWO (2) COATS OF "MINWAY" TYPE STAIN AND SEALER. PAINT WILL NOT SEAL DEEP ENOUGH AND WILL SHOW SCRATCHES FASTER.

